



## OPTIONAL ACCESSORIES

### OPTIONAL ACCESSORIES - FLEXII GRASS DRILLS\*

ITEM	DESCRIPTION
Cool Season/Grain Seed Box with Seed Box Agitator	A third seed box for some grass species, small grains, or soybeans.
Row Dividers for Cool Season/Grain Seed Box	Seed box dividers to aid in keeping seed distributed across the drill.
Output Reduction Kit	A speed reduction kit that permits planting very low seeding rates. Seed output from all seed boxes on the drill is reduced by 50%. <b>Not available on rear drive models FLXII-86RD and FLXII-88RD.</b>
No-Till 13 1/2" Concave Notched Blade	Angular mounted Trash Plow for use in interseeding into sod or cover crops.
No-Till 18" Concave Notched Blade	Trash Plow for use in interseeding into <u>moderate</u> levels of non-fragile, loose residue (corn stalks).
No-Till 18-1/2" - 24 Wave Blade (Caster Style)	Single wavy coulter for use in fragile residues (soybean or small grain). <b>(24 Wave, 18-1/2" Blade is Standard After 01-01-04)</b>
Depth Bands	Standard size is 12". Optional sizes available include 12-1/2", 11-1/2", or 9-1/2". Changing depth band size also requires changing the outside scrapers.
Covering Chains (3 Ring Loop Style)	<b>Replaces standard press wheel.</b> Used in place of press wheels in extremely rocky conditions.
Folding Tongue	Tongue folds back against the front of the drill for transport on a trailer or during storage.
Acre Meter	Records acreage planted by the drill.
Walk Board Brackets w/o Boards	Brackets for mounting walk boards along the back of the seed boxes.
Rear Transport Wheels	Additional wheels mounted behind the drill for road transport. Requires a second hydraulic hook-up.
Duels for Rear Transport Wheels	Duel wheels for rear transport option. Use duel wheel option on Mdl. 816 and larger.
Front Caster Wheel	Fifty percent of the drill weight is on the tongue. This caster wheel carries the tongue weight in planting and transport. Used for Rear Drive Models 816, 818, and 822. May also be used on End Wheel drills that have rear transport wheels.
Highway Tires	7.60 Radial 4-6 ply tire.
Truck Tires	7.60 Bias 8-10 ply tire.
Flotation Tires	9.5L Rib Implement 8-ply tire.
Spare Tire on Rim	Spare tire mounted on a rim for the drill.
Spare Tire Mount (Lockable)	Bracket for mounting a spare tire on the drill that can be locked.
Rear Jack Stand	<b>Used on drills without no-till or rear transport options.</b> Used when parking these drills in the transport position. Use two jacks on Models FLXII 816, 818, & 822.
Toolbox (Lockable)	Toolbox with a lockable latch mounted on the drill.
Safety Chains	Chain for connecting the drill to the tractor.
Tail Lights	Trailer type taillights (4 prong, flat plug style) with wiring harness the length of the tongue.
Scale (Pesola 93628-M)	Hand held scale that weighs both in grams and ounces. Used in drill calibration.

**\*Rear Drive Drills - Options are same as for end wheel drills except rear transport wheels are not applicable.**



## OPTIONAL ACCESSORIES

### OPTIONAL ACCESSORIES - FLEXII GRAIN DRILLS

ITEM	DESCRIPTION
Row Dividers for Grain Seed Box	Seed box dividers to aid in keeping seed distributed across the drill.
No-Till 13 1/2" Concave Notched Blade	Angular mounted Trash Plow for use in interseeding into sod or cover crops.
No-Till 18" Concave Notched Blade	Trash Plow for use in interseeding into <u>moderate</u> levels of non-fragile, loose residue (corn stalks).
No-Till 18-1/2" 24 Wave Blade (Caster Style)	Single wavy coulter for use in fragile residues (soybeans or small grain). <b>(24 Wave, 18-1/2" Blade is Standard After 01-01-04)</b>
Depth Bands	Standard size is 12". Optional sizes available include 12-1/2", 11-1/2", or 9-1/2". Changing depth band size also requires changing the outside scrapers.
Press Wheel (Iron Angular Mount)	Cast iron press wheel for use with deeper planted seeds such as soybeans.
Covering Chains (3 Ring Loop Style)	<b>Replaces standard press wheel.</b> Used in place of press wheels in extremely rocky conditions.
Folding Tongue	Tongue folds back against the front of the drill for transport on a trailer or during storage.
Acre Meter	Records acreage planted by the drill.
Walk Board Brackets w/o Board	Brackets for mounting walk boards along the back of the seed boxes.
Highway Tires	7.60 Radial 4-6 ply tire.
Truck Tires	7.60 Bias 8-10 ply tire.
Flotation Tires	9.5L Rib Implement 8-ply tire.
Spare Tire on Rim	Spare tire mounted on a rim for the drill.
Spare Tire Mount (Lockable)	Bracket for mounting a spare tire on the drill that can be locked.
Tool Box (Lockable)	Toolbox with a lockable latch mounted on the drill.
Safety Chains	Chain for connecting the drill to the tractor.
Tail Lights	Trailer type taillights (4 prong, flat plug style) with wiring harness the length of the tongue.
Scale (Pesola 93628-M)	Hand held scale that weighs both in grams and ounces. Used in drill calibration.