



## KEY WORD INDEX

### AGITATOR

Transporting the Drill.....	20-7
Preliminaries to Calibration.....	30-3
Idler Assemblies.....	40-10
Troubleshooting.....	50-1, 50-2, 50-7, 50-9
Optional Accessories.....	70-1

### ACRE METER

Large Fluffy Seed Box - Note.....	30-10
Non-Resettable Hub-Style.....	30-15
Troubleshooting.....	50-13
Optional Accessories.....	70-1, 70-2

### AXLE

Lubrication.....	40-12, 40-13
Troubleshooting.....	50-10

### BEARINGS/BUSHINGS

Failure.....	30-2
Maintenance.....	40-5, 40-6
Bronze Bushings.....	40-7
Bearing Mount.....	40-7
Lubrication.....	40-12, 40-13
Press Wheel / End Wheel.....	40-12, 40-13
Troubleshooting.....	50-1, 50-2, 50-3, 50-4, 50-5, 50-7

### CALIBRATION

Seed Calibration Procedure.....	30-2
Methods.....	30-2
Factors Affecting Seeding Rate.....	30-3
Preliminaries.....	30-3
Procedure for 8" Row Spacing (Grams & Ounces).....	30-4
Procedure for 10" Row Spacing (Grams & Ounces).....	30-5
Seeds Per Row Foot / Seeds Per Pound.....	30-6
Sample Bag Per Field.....	30-6
Seed Information.....	30-7, 30-8
Adjusting Calibration.....	30-9 through 30-13
Troubleshooting.....	50-7 through 50-10

### CHAINS

Safety Precautions.....	10-4
Set-Up and Preparation.....	20-2
Orientation of Seed Box Chains.....	40-10
Lubrication.....	40-12, 40-13
Chain Identification and Part Number.....	40-17
Troubleshooting.....	50-1



## KEY WORD INDEX

### CLUTCH

Clutch Assembly.....	40-7
Sprocket.....	40-8
Tripper.....	40-8, 40-9
Lubrication.....	40-12
Troubleshooting.....	50-2, 50-3
Storage.....	60-1

### COOL SEASON BOX

Installation.....	20-8
Adjusting The Calibration.....	30-9, 30-10
Maintenance.....	40-1, 40-2, 40-3
Troubleshooting.....	50-6, through 50-9
Storage & Placing the Drill Back In Service.....	60-1
Optional Accessories - FLEXII Grass Drill.....	70-1
Parts Catalog (Used w/Fluffy Box).....	90-29 through 90-32
Parts Catalog (Not Fitted w/Fluffy Box).....	90-33 through 90-36

### DECALS

Safety.....	10-2
Placement.....	10-3
Missing Decals.....	20-4

### DEPTH BANDS

Opener Penetration.....	30-1
Scrapers.....	40-4, 40-5
Sizes.....	40-6
E-Z Off.....	40-6
Troubleshooting.....	50-4, 50-5
Optional Accessories.....	70-1, 70-2

### DISC OPENERS

Set-Up and Preparation.....	20-2
Double-Disc Openers.....	30-2
Servicing Disc Blades.....	40-5, 40-6
Lubrication.....	40-12, 40-13
Troubleshooting.....	50-3, 50-4, 50-5, 50-12

### DOUBLE SPROCKET

Output Reduction Kit Installation.....	20-9, 20-10
Cool Season or Grain Seed Box.....	30-9
Troubleshooting.....	50-9



# KEY WORD INDEX

## DRILL

Models .....	i
Size Designation .....	ii
Warranty .....	iii
Uncrating and Set Up.....	20-1, 20-2, 20-3, 20-4
Attaching.....	20-5
Identifying.....	20-6
Transporting.....	20-7
Installing Options.....	20-8, 20-9, 20-10
Seeding Capacity .....	30-15
Storage & Placing the Drill back In Service .....	60-1, 60-2
Options.....	70-1, 70-2
Specifications.....	80-1, 80-2, 80-3

## FERTILIZER

Important Note.....	30-2
Troubleshooting.....	50-2, 50-7

## FOOT BOARD BRACKETS OPTION

Parts Catalog – Foot Board Brackets .....	90-67
---	-------

## GREASE ZIRK

Lubrication.....	40-12, 40-13
Troubleshooting.....	50-2

## GUARDS

Safety Precautions.....	10-1, 10-4
-------------------------	------------

## HYDRAULIC

High Pressure Safety.....	10-5, 20-4
Hookups .....	20-1, 20-4, 20-5
Rear Drive - Tongue Hydraulic Cylinder .....	30-17
Cylinders.....	40-14, 40-15
Hoses.....	40-15
Troubleshooting.....	50-10, 50-11
Parts Catalog - Main Frame Hydraulics.....	90-15, 90-16

## HITCHES

Installation .....	20-1
Three-Point .....	30-15
Maintenance.....	40-14

## IDLER ASSEMBLIES

Maintenance.....	40-10
Lubrication.....	40-12, 40-13
Parts Catalog - Idler Assemblies.....	90-13, 90-14



# KEY WORD INDEX

## LARGE FLUFFY SEED BOX

Operating .....	30-10
Speed Changer Variables.....	30-10
Maintenance.....	40-1
Lubrication - Hinges.....	40-1, 40-13
Troubleshooting.....	50-7, 50-8, 50-9
Parts Catalog - Large (Fluffy) Seed Box Assembly .....	90-26 through 90-28

## LEVELING SPRING

Adjusting .....	20-1, 20-5, 30-17
Function.....	30-17
Troubleshooting.....	50-11

## LUBRICATION

Schedule.....	40-12, 40-13
---------------	--------------

## MAIN FRAME

Maintenance.....	40-11
Troubleshooting.....	50-10
Parts Catalog - End Wheel Drive.....	90-2 through 90-6
Parts Catalog - Rear Wheel Drive .....	90-7 through 90-9
Parts Catalog - Sub-Assemblies.....	90-10 through 90-12

## NO-TILL

Trash Plow .....	20-3
25-Wave Caster Style .....	20-3
Control of Penetration .....	30-16
Lubrication.....	40-12, 40-13
Troubleshooting.....	50-11, 50-12
Parts Catalog.....	90-47, 90-49

## OUTPUT REDUCTION KIT

Installation - End Wheel Drive .....	20-9, 20-10
Installation - Rear Wheel Drive .....	20-10
Function.....	30-13
Part Numbers .....	30-13
Effect on Acre meter Reading .....	30-15
Optional Accessories .....	70-1
Parts Catalog - End Wheel Drive.....	90-55, 90-56
Parts Catalog - Rear Wheel Drive .....	90-57, 90-58

## PARKING JACK

Set-Up.....	20-2
Optional Accessories - Rear Jack Stand .....	70-1

## PENETRATION

Opener .....	30-1
Weight Transfer.....	30-1
Control of Penetration .....	30-16
Troubleshooting.....	50-11, 50-12



## KEY WORD INDEX

### PICKER WHEELS

Saw Toothed .....	30-14
Large (Fluffy) Seed Box .....	40-1
Troubleshooting .....	50-1, 50-7, 50-9

### PLUGGING

Seed Passageway .....	30-14
Causes of Plugging .....	30-14
Troubleshooting .....	50-8, 50-9, 50-10

### PRESS WHEELS

Set-Up .....	20-2
“V” Press Wheel .....	30-1
Cast Iron.....	30-1
Leading Press Wheel .....	30-1
Troubleshooting .....	50-6

### REAR DRIVE

Set-Up .....	20-5
Weight Transfer .....	30-1
Tongue Hydraulic Cylinder .....	30-17
Maintenance.....	40-11
Important Note.....	40-15
Troubleshooting .....	50-11
Parts Catalog - Main Frame Rear Wheel Drive .....	90-7 through 90-9
Parts Catalog - Tongue Assembly.....	90-17 through 90-19
Parts Catalog - Output Reduction Kit Rear Wheel Drive .....	90-57, 90-58

### RIVETS

Troubleshooting .....	50-3
-----------------------	------

### ROLL PINS

Troubleshooting .....	50-1, 50-2, 50-6
-----------------------	------------------

### SAFETY

Alert Symbol.....	10-1
Safety Signs .....	10-1
Decals .....	10-2
Placement of Safety Decals .....	10-3
Precautions.....	10-4, 10-5
Highway and Transport Precautions.....	10-6

### SCRAPER ASSEMBLIES

Servicing .....	40-4
Scraper Part Numbers .....	40-4
Troubleshooting .....	50-5
Parts Catalog - Planter Assembly .....	90-20 through 90-23



# KEY WORD INDEX

## SEALS

Lubrication..... 40-12, 40-13

## SEED

Seed Information Tables..... 30-7, 30-8

## SMALL SEED BOX

Adjusting Calibration .....30-9

Seeding Chart .....30-11

Maintenance & Service.....40-1

Troubleshooting.....50-6, 50-7, 50-8, 50-10

Parts Catalog..... 90-24, 90-25

## SPECIFICATIONS

Grass Drills - All FLXII Models (End Wheel Drive).....80-1

Grass Drills - All FLXII Models (Rear Wheel Drive).....80-2

Grain Drills - All FLXII Models (End Wheel Drive).....80-3

## SPEED CHANGER DERAILLEUR STYLE

Description.....30-10

Variables - Fluffy Box Only .....30-12

Maintenance.....40-7

Lubrication.....40-13

Troubleshooting..... 50-1, 50-2, 50-8

Parts Catalog..... 90-37 through 90-39

## TIRES

Precautions.....20-6

Important Note.....30-11

Troubleshooting..... 50-6, 50-10

## TONGUE

Installation .....20-1

Attaching Drill .....20-5

Adjustment.....30-17

Rear Drive - Tongue Hydraulic Cylinder .....30-17

Parts Catalog - Tongue Assemblies ..... 90-17 through 90-19

Parts Catalog - Folding Tongue ..... 90-59 through 50-60

## TORSION ARM

Parts Catalog - Round Shank (Caster Style 1993-)..... 90-47, 90-48

Parts Catalog - Trash Plow (1993-) ..... 90-49, 90-50

## WARRANTY

Farm Equipment Limited..... iii